

CLEANING & DISASSEMBLY

1. Completely remove the **Thickness Adjustment Knob** and the **Locking Wing Nut** from the **Adjustment Screw** by turning counter-clockwise.
2. Hold on to the top of the **Hamburger Press** and turning counter-clockwise, unscrew the **Adjustment Plate** and **Adjustment Screw** from the **Hamburger Press**.
3. Clean all parts in warm soapy water, then thoroughly dry.

ASSEMBLY

1. By holding on to the top of the **Hamburger Press**, screw the **Adjustment Plate** and **Adjustment Screw** into the top of **Hamburger Press** by turning clockwise until approximately half the threads are showing on top of the **Hamburger Press**.
2. Re-thread the **Locking Wing Nut** onto the **Adjustment Screw**. Pay special attention not to cross-thread any parts when assembling.
3. Screw the **Thickness Adjustment Knob** clockwise onto **Adjustment Screw** until finger tight.



ATTENTION

If any components of this unit are broken, do not operate properly, or for product returns, please contact PragoTrade LLC at

1-800-814-4895

Outside the U.S. call 440-638-3131.


For the online catalog, log onto www.westonsupply.com.

Exclusively imported by PragoTrade LLC Strongsville, Ohio
www.pragotrade.com

WESTON™

SINGLE HAMBURGER PRESS INSTRUCTIONS


MODEL #07-0301

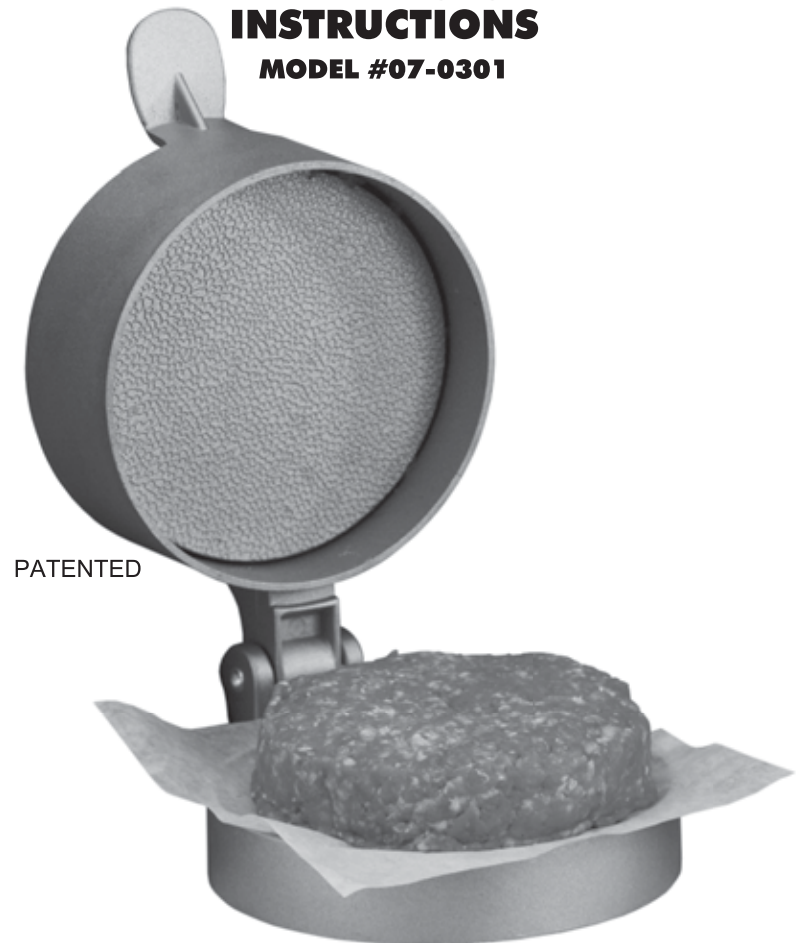

REV101409

WESTON™
SINGLE HAMBURGER PRESS
MODEL #07-0301

Order Weston Brand Patty Paper
 Model No. 10-0102
 by visiting
 westopnsupply.com

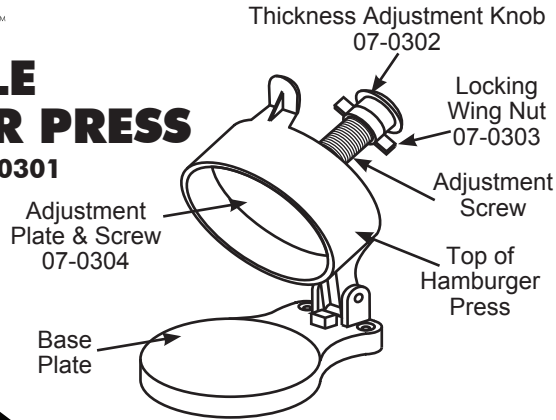

If any components of this unit are broken or the unit does not operate properly, call Pragotrade LLC Toll Free at

1-800-814-4895
 Monday thru Friday 8:00am-5:00pm EST.
 Outside the U.S. call 440-638-3131

MAKING HAMBURGER PATTIES

Clean the Hamburger Press thoroughly before each use.

TO SET THE DESIRED PATTY THICKNESS:


1. Adjust the **Wing Nut** all the way to the top of the **Adjustment Screw** by turning it counter-clockwise.
2. Use the **Weight Markings** on the **Shaft** to measure the patty thickness. (The indication line for the desired weight should be set to the edge on the top of the **Hamburger Press**.)
3. Hold on to the **Thickness Adjustment Knob** and turn the **Adjustment Screw** up or down to reach the desired patty thickness.
4. Hold the **Adjustment Screw** in place and turn the **Locking Wing Nut** until it tightens against the top of the **Hamburger Press**. **CAUTION:** DO NOT over-tighten the **Locking Wing Nut**, damage to the threads may occur.

TO MAKE PATTIES:

1. Once the desired weight has been selected, place appropriate amount of ground meat onto the **Base** of the **Hamburger Press**.

NOTE: When adjusting your patty weight, allow for 10% to 20% shrinkage when fully cooked.

2. Close the **Cover** tightly until the excess meat bulges out of the **Hamburger Press**.
3. Remove any excess meat from the outside of the **Hamburger Press**.
4. Open the **Hamburger Press** to reveal your perfectly made patty.
HELPFUL TIP: Place a piece of waxed patty paper under the meat and another on top of the meat before closing the **Hamburger Press**. This will make it easier to remove the patty. For best results, meat should be between 36° (2°C) and 40° F (4°C).
5. Thoroughly clean & dry the **Hamburger Press** before storing.

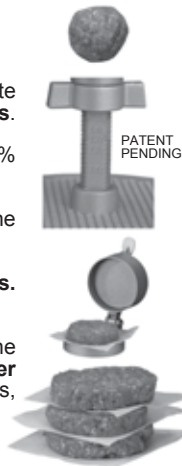

WARRANTY INFORMATION
 SAVE THIS WARRANTY INFORMATION FOR YOUR RECORDS!

Pragotrade LLC warrants to the ORIGINAL RETAIL PURCHASER of this product that if operated in accordance with the printed instruction accompanying it, then for a period of 1 year from the date of purchase, the product shall be free from defects in material and workmanship.

The Warranty Card, along with a copy of the original receipt, must be received by Pragotrade LLC within 30 days from purchase date for the warranty to apply. Failure to send the completely filled out Warranty Card, along with a copy of the original receipt, will void the warranty.

The product must be delivered to or shipped freight prepaid to Pragotrade LLC for warranty services, in either its original packaging or similar packaging affording an equal degree of protection. Damage due to shipping is not the responsibility of the company. Pragotrade LLC charges a \$35.00 per hour bench charge. NOTE: No repairs will be started without the authorization of the customer. The return shipping cost to the customer will be added to the repair invoice.

Pragotrade LLC will repair (or at its discretion, replace) the product free of charge, if in the judgment of the company, it has been proven to be defective as to seller's labor and material, within the warranty period.

New or rebuilt replacements for factory defective parts will be supplied for one (1) year from the date of purchase. Replacement parts are warranted for the remainder of the original warranty period.

For non-warranty repairs, contact Pragotrade's Customer Service at 1-800-814-4895 M-F 8am-5pm EST (outside of the United States 440-638-3131) to obtain a Return Authorization Number (RMA Number). Pragotrade will refuse all returns that do not contain this number. **DO NOT RETURN THE UNIT WITHOUT PROPER AUTHORIZATION FROM PRAGOTRADE LLC.**

LIMITATIONS: The warranty is void if the product is used for any purpose other than that for which it is designed. The product must not have been previously altered, repaired, or serviced by anyone else other than Pragotrade LLC. If applicable, the serial number must not have been altered or removed. The product must not have been subjected to accident in transit or while in the customer's possession, misused, abused, or operated contrary to the instructions contained in the instruction manual. This includes failure caused by neglect of reasonable and necessary maintenance, improper line voltage and acts of nature. This warranty is not transferable and applies only to U.S. and Canadian sales.

Except to the extent prohibited by applicable law, no other warranties whether expressed or implied, including warranty merchantability and fitness for a particular purpose, shall apply to this product. Under no circumstances shall Pragotrade LLC be liable for consequential damages sustained in connection with said product and Pragotrade LLC neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than such as is expressly set forth herein. Any applicable implied warranties are also limited to the one (1) year period of the limited warranty.

This warranty covers only the product and its specific parts, not the food or other products processed in it.
CUT ALONG THE DOTTED LINE AND SEND THE WARRANTY CARD ALONG WITH A COPY OF YOUR ORIGINAL PURCHASE RECEIPT TO:

Pragotrade LLC
 20365 Progress Drive, Strongsville, OH 44149

WARRANTY CARD
 SEND THIS CARD ALONG WITH A COPY OF YOUR ORIGINAL PURCHASE RECEIPT

Customer Name: _____

Address: _____

City/State/Zip: _____

Telephone Number: (____) _____

E-Mail Address: _____

Original Date of Purchase: ____/____/____

Product Model #: _____

Serial # (if applicable): _____